

**HP 3455A  
Digital Voltmeter**



**HP 1000  
Computer**

HEWLETT PACKARD

## Programming Guide

Application Note 401-7



### Device Introduction

The model 3455A Digital Voltmeter makes AC voltage measurements with five-digit resolution and DC voltage and resistance measurements with five- or six-digit resolution as programmed by the user. The 3455A employs an automatic calibration (Auto Cal) feature which automatically corrects for possible gain and offset errors in the analog circuitry to provide maximum accuracy. A removable reference module permits external calibration of the DC voltage and resistance functions. The reference module can be removed, calibrated, and returned to the instrument; or the module can be replaced with another recently calibrated reference. A MATH feature permits voltage or resistance measurements to be scaled into convenient units or to be read directly in percent error from a selected reference.

The 3455A is HP-IB programmable for system applications.<sup>1</sup> Programming is made simple due to the ingenious design of the front panel which allows the programmer to see visually which multimeter functions must be selected. The 3455A is both a talker and a listener on the bus. Typically, the instrument is programmed, externally triggered, and then the measurement is read into the computer.

### Addressing

The 3455A has a set of binary address switches on the rear panel which allows the operator an easy method of selection. The 5 bit octal address 26 is often used as the 3455A talk/listen address (figure 7-1).

A5	A4	A3	A2	A1	
1	0	1	1	0	Binary
2				6	Octal

Figure 7-1. Binary and Octal Address Representation

### System Preparations

#### LU Assignment

One logical unit number (LU) should be assigned to the 3455A. After setting the switches as shown in figure 7-1, assign a logical unit number. From File Manager,

:SYLU,15,10,26B

would assign LU 15 to equipment table 10. The device address associated with LU 15 would be 26 octal.

#### Buffering

The buffering option for the 3455A EQT should be turned off until the device has been checked out.

:SYEQ,10,UN

would set the equipment table in the above example to the unbuffered mode.

Remember, the bus must be unbuffered if the user program performs its own error checking.

<sup>1</sup>See the Operating and Service Manual for the 3455A (part number 03455-90002) and Application Note 401-1 (5953-2800).

## Time-out

The time-out value for the EQT should be given consideration for the 3455A. Remember that the time-out value will affect all devices on the same EQT, and should encompass the needs of all these devices.

From File Manager, a system request may be used to set the time-out value.

```
:SYTD,10,100
```

will set the time-out on EQT 10 to one second.

A 3455A time-out is usually considered to be an error condition. By default this error will be detected by the operating system; however, the user program may handle the situation by setting up the device configuration word accordingly.

When bit eight (the E bit) of the configuration word is zero, the operating system will set the logical unit down and put the user program into the general wait state until the "UP" operator request is entered from a user terminal. When the E bit is configured to one, the time-out will not stop execution of the user program. Instead the current bus status should be checked (by calling the subroutine "IBERR") each time an I/O request is made to determine whether the time-out occurred.

Two examples of the device configuration word are shown (figure 7-2), one for operating system processing of the time-out condition and the other for user program processing of the error.

A File Manager request may be used to adjust the error bit in the device configuration word. If the LU to be configured is 15,

```
:CN,15,25B,17400B
```

declares that time-out processing will be performed by the user program. Other bits also have specific meanings as described in the "Configuration" section.

## Configuration

The device configuration word should be examined for possible changes to the default mode.

The 3455A may be programmed to assert the SRQ line when a reading is ready to be sent back to the computer. The S bit should be turned off in this situation.

```
:CN,15,25B,17000B
```

for LU 15 represents the default condition of the device configuration word.

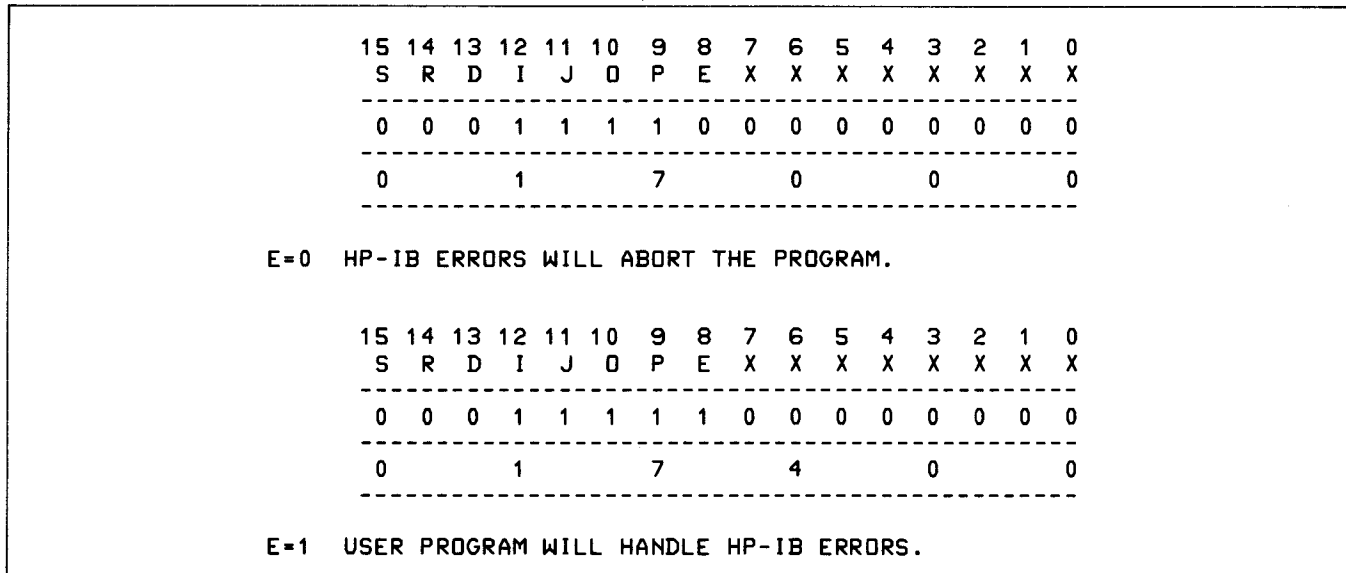


Figure 7-2. Example Device Configuration Words

DMA is not usually allocated for the 3455A. Typically, the two DMA channels in RTE are used for the faster devices in the system like tape drives and magnetic discs. Because the 3455A is a slower device which transmits short records, it can tie up a DMA channel for long periods of time. (See 3455A performance characteristics.) Set bit 13 (the "D" bit) to zero in the device configuration word.

The S,I,J,O, and P bits all default to the correct value of one.

The following example demonstrates a typical configuration request from file manager:

```
:CN,15,25B,17000B
```

for LU 15. See figure 7-3 for a description of each bit.

### Remote

The 3455A must be set to remote operation before programming can begin. Remote is one of the HP-IB management lines, and once asserted, it will remain in that state until it is cleared. The remote enable command may be accomplished from File Manager (in the WELCOM file at boot-up for example),

```
:CN,15,16B
```

for LU 15, or from the user FORTRAN program,

```
CALL RMOTE(15)
```

An example File Manager procedure file is shown in figure 7-4.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
S	R	D	I	J	O	P	E	X	X	X	X	X	X	X	X
0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
0			1			7			0			0			0

S=0 I/O REQUEST NOT ABORTED ON AN SRQ.  
R=0 NO I/O RESTART ATTEMPT AFTER SRQ.  
D=0 DMA IS NOT ALLOCATED FOR THIS DEVICE.  
I=1 REQUIRE AN EOI FROM DEVICE WITH THE LAST BYTE.  
J=1  
O=1 ISSUE AN EOI WITH THE LAST BYTE.  
P=1  
E=0 HP-IB ERRORS WILL ABORT THE PROGRAM.

Figure 7-3. Configuration Evaluation

:SYLU,15,10,26B	Assign the logical unit number.
:CN,15,16B	Set the 3455A to remote.
:CN,15,25B,17400B	User program will handle errors.
:SYEQ,10,UN	Unbuffered operation.

Figure 7-4. An Example File Manager Procedure File

## Programming

When the basic idea concerning the measurement operation of the 3455A is understood, the digital voltmeter can be programmed simply by examining its front panel. No manuals or tables are needed. (These programming functions are shown in table 7-1.)

**Table 7-1. HP-IB Program Codes**

	Control	Program Code
FUNCTION	DC Volts	F1
	AC Volts	F2
	Fast AC Volts	F3
	2 Wire k $\Omega$	F4
	4 Wire k $\Omega$	F5
	Test	F6
RANGE	.1	R1
	1	R2
	10	R3
	100	R4
	1 K	R5
	10 K	R6
	AUTO	R7
TRIGGER	Internal	T1
	External	T2
	Hold/Manual	T3
MATH	Scale	M1
	Error	M2
	Off	M3
ENTER	Y	EY
	Z	EZ
STORE	Y	SY
	Z	SZ
AUTO CAL	Off	A0
	On	A1
HIGH RESOLUTION	Off	H0
	On	H1
DATA READY RQS	Off	D0
	On	D1
BINARY PROGRAM		B

Three steps are required:

- Program the front panel instrument controls (DC volts, range .1 volts, trigger mode hold manual, etc.). The first letter of each word (on the front panel) describing a logical group of buttons on the device is underlined.

To "push a button" under software control, the first letter of the logical group is sent, followed by the number representing the position of the button in that group. There are no delimiters between commands. For example, "F2R7" sets AC volts and autorange.

- Trigger the 3455A to take a measurement. Trigger mode T1 (internal trigger) should not be used for bus operations to ensure the proper reading is taken. Instead, trigger mode "T3T3" should be used.
- Measurements may also be taken by alternately performing the trigger request, CALL TRIGR (IDLU), and then performing a read request with a variable name to return the measurement to the computer.

The example program (figure 7-5) shows one method of 3455A programming. After the first reading is taken, a trigger command can be used for each successive reading.

The following program in figure 7-6 can be used to make 50 readings and average the result.

To speed up readings, AUTO CAL may be turned off. This is done by sending "A0":

```
WRITE (15,10)
10 FORMAT ("A0")
```

for LU 15. "A1" turns auto calibrate back on.

The 3455A also has what is called "learn mode". This allows the front panel switch positions to be learned by the computer so that the same setup can be repeated later. This is done by sending "B" for binary program (figure 7-7).

```

0001  FTN4,L
0002      PROGRAM A3455(3),07-21-78 (GWG) 3455A MEASUREMENTS
0003      REAL          MEAS(10)
0004      INTEGER        YES
0005      COMMON         ILU,ILST,IDLU
0006      DATA          YES/2HYE/
0007      IF(INPRM(ID).EQ.YES)GO TO 10      Obtain input parameters.
0008      WRITE(ILU,20)                    If these are not available, instruct how
                                          to run the program then exit.

0009      20 FORMAT(" :RU,A3455,ILST,IDLU")
0010      STOP
0011      10 WRITE (IDLU,30)                Program the DVM.
0012      30 FORMAT ("F1R7T2T3")
0013      IF (IBERR(IDLU).NE.0)GO TO 100   Check for errors.
0014      DO 40 J=1,10
0015      CALL TRIGR (IDLU)                Trigger the DVM.
0016      READ (IDLU,*) MEAS(J)           Read the measurement. Free field
                                          input can be used.

0017      IF (IBERR(IDLU).NE.0)GO TO 100   Check for errors.
0018      40 CONTINUE
0019      WRITE(ILU,50) (MEAS(J),J=1,10)   After 10 measurements are taken, print
                                          them on the user's terminal.

0020      50 FORMAT (5(1X,E13.6))
0021      100 END

```

Figure 7-5. FORTRAN Program to Obtain 3455A Measurements

```

0001  FTN4,L
0002      PROGRAM B3455(3),07-21-78 (GWG) AVERAGE 50 READINGS
0003      REAL          MEAS(50)
0004      INTEGER        YES
0005      COMMON         ILU,ILST,IDLU
0006      DATA          AVG/0./,YES/2HYE/
0007      IF(INPRM(ID).EQ.YES) GO TO 10      Obtain input parameters.
0008      WRITE (ILU,20)
0009      20 FORMAT (" :RU,B3455,ILST,IDLU")
0010      STOP
0011      10 WRITE (IDLU,30)                Program the 3455A.
0012      30 FORMAT ("F1R7T2T3")
0013      DO 40 I = 1,50                    Obtain 50 measurements.
0014      CALL TRIGR (IDLU)                Trigger each one.
0015      READ (IDLU,*) MEAS (I)           Free field input.
0016      40 AVG = AVG + MEAS (I)         Sum up the measurements.
0017      AVG = AVG/50.                    Compute the average.
0018      WRITE (ILU,50) AVG
0019      50 FORMAT ("AVERAGE:"E13.6)
0020      END

```

Figure 7-6. FORTRAN Averaging Program for the 3455A

```

0001      FTN4,L
0002      PROGRAM LEARN (3),07-21-78 (GWG) BINARY LEARN
0003      INTEGER      IPM(5), ILRN(2)
0004      COMMON      ILU,ILST,IDLU
0005      DATA      NO/2HNO/
0006      IF(INPRM(ID).EQ.NO)GO TO 100
0007      WRITE (IDLU,10)
0008      10 FORMAT("B")
0009      READ (IDLU,20)(ILRN(I),I = 1,2)
0010      20 FORMAT (2A2)
0011      PAUSE
0012      WRITE(IDLU,30)ILRN
0013      30 FORMAT("B",A2)
0014      100 END
    
```

Figure 7-7. 3455A Learn Mode Program

## Service Requests

If manual or external triggering is used, the time interval between readings may be so long that the computer may be wasting time waiting for a reading. The digital voltmeter can "interrupt" the computer when a reading is completed and have the computer take the reading. This is called "Data Ready Request Service." To use this feature, the command "D1" is given to the 3455A. The program in figure 7-8 demonstrates this capability.

Take a situation where the 3455A is triggered externally and measurements may come every week, month, i.e., very long periods of time. Assuming that the operating system remains intact during this period, and the ID segment of the program to be scheduled remains in memory, then the user program can be isolated from the system on a mass storage disc until an SRQ arrives from the 3455A. When the SRQ is generated, the HP-IB driver automatically performs a serial poll to determine which device generated the SRQ, and then schedules the associated program.<sup>2</sup>

```

FTN4,L
      PROGRAM S3455(3),07-25-78 (GWG) SRQ PROGRAM
C
C SYSTEM PREPARATIONS:
C SET THE E BIT IN THE DEVICE CONFIGURATION WORD
C UNBUFFER THE EQT
C
C THE RTE SAVE RESOURCES OPTION HAS BEEN
C USED IN THIS PROGRAM. IT IS SCHEDULED
C ONCE MANUALLY FOR SETUP, THEN 10 TIMES
C BY 3455A INTERRUPTS.
C
    
```

Figure 7-8. 3455A Service Request Measurements

<sup>2</sup>See the HP-IB Users Manual (59310-90064) for more detailed information.

```

C RMPAR IS CALLED 10 TIMES.
C
  DOUBLE PRECISION A(10)
  INTEGER          IPM(5),IPRG(4),ISTT(2),ISTAT(10)
  COMMON          ILU,ILST,IDLU
  DATA          IPRG/5,2H55,2H34,2H2 /,LOOP/0/
  IF(INPRM(ID).EQ.2HND)GO TO 999
  WRITE(ILU,100)IDLU
100 FORMAT(" S3455A: SRQ PROGRAM SETUP",
  &      " IN PROGRESS FOR LU "I2"."/)
  CALL SRQ(IDLU,16,IPRG)
  IF(IERR(NN).LT.0) GO TO 20
  WRITE(IDLU,110)
110 FORMAT("F1R7D1T2T3")
  10 LOOP=LOOP+1
  CALL EXEC(6,0,1)
  CALL RMPAR(IPM)
  ISTAT(LOOP)=IPM
  IF(ISTAT(LOOP).NE.65)GO TO 20
  READ(IDLU,*)A(LOOP)
  IF(LOOP.EQ.10) GO TO 20
  CALL TRIGR(IDLU)
  GO TO 10
999 WRITE(ILU,130)
130 WRITE(" :RU,S3455,ILST,IDLU"/)
  STOP
  20 DO 30 JL=1,LOOP
  30 WRITE(ILU,140)ISTAT(JL),A(JL)
140 FORMAT(SX,I6,5X,E14.6)
  CALL SRQ(IDLU,17)
  END

C
C
C
  FUNCTION IERR(N),07-26-78 (GWG) HANDLE BUS ERRORS
  COMMON ILU,IDLU
  I=IBERR(IDLU)
  IERR=0
  IF(I.EQ.0)GO TO 10
  IERR=-I
  WRITE(ILU,20)I,IDLU
20  FORMAT(" S3455: BUS ERROR "I2" ON LU "I2"."/)
10  RETURN
  END

```

Figure 7-8. 3455A Service Request Measurements (Continued)

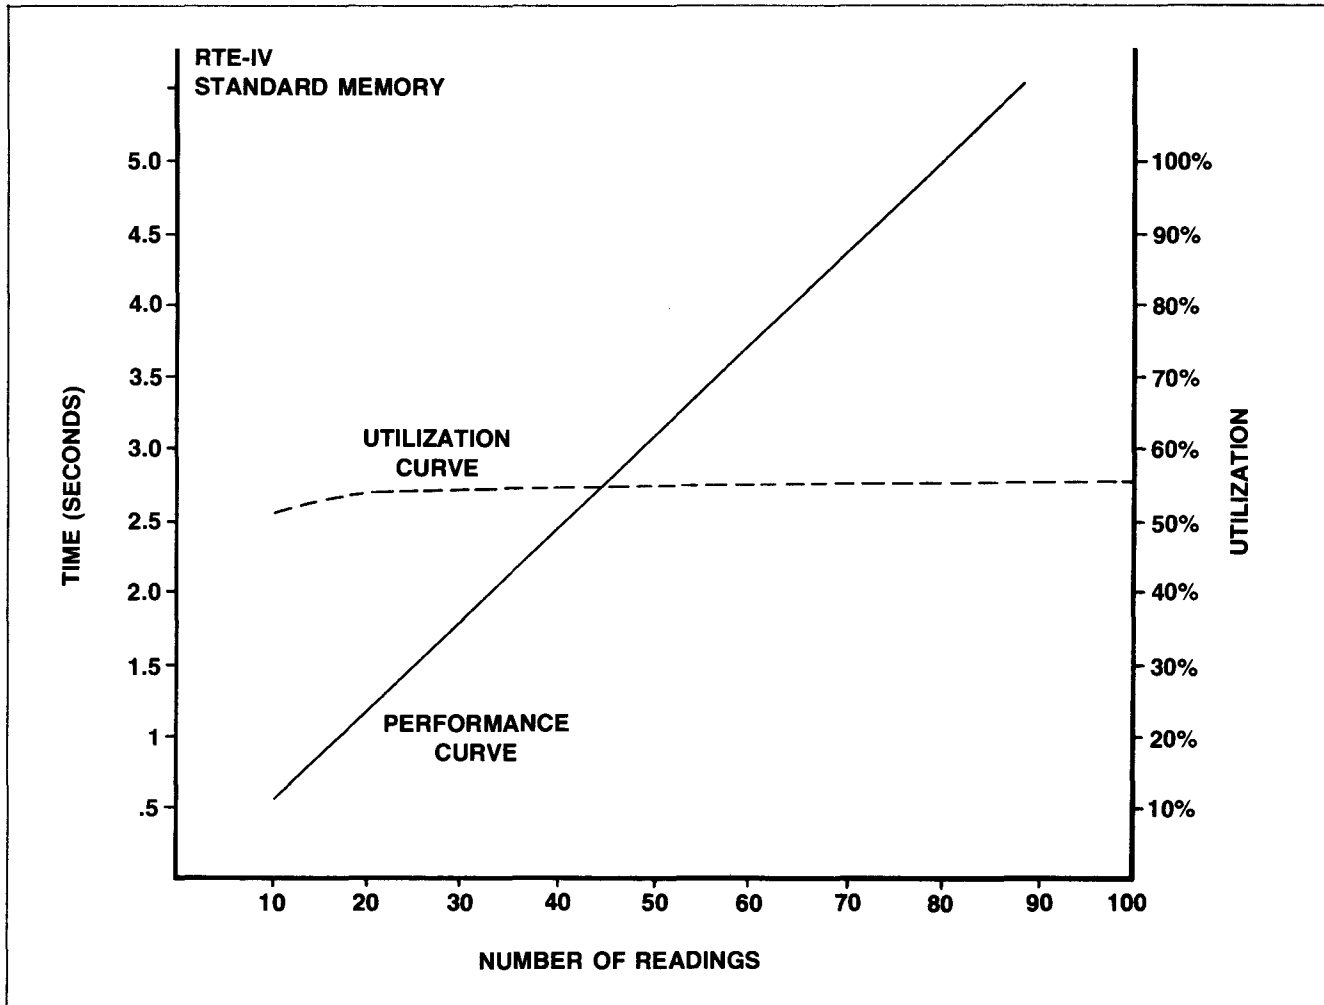


Figure 7-9. 3455A Performance Curve

```

0046 C -----
0047 C ENTER USER STATEMENTS OUT OF TEST HERE.
0048 C
0049       WRITE(IDLU,5000)
0050 5000 FORMAT("F1R7T2T3A0D0H0")
0051 C
0052 C
0053 C -----

0061 C -----
0062 C ENTER USER STATEMENTS FOR TEST HERE.
0063       DO 100 IJ=1,ILN
0064         CALL TRIGR(IDLU)
0065         READ(IDLU,*)A
0066 C USER STATEMENTS FOR TEST END HERE.
0068 C -----
    
```

Figure 7-10. 3455A Input Statements



## Performance

Performance in an RTE system is dependent on several factors including:

1. The number of peripherals (EQT's) in the system.
2. The number of programs in the time list.
3. The priority and type of program interacting with the 3455A.
4. Whether or not output buffering has been allocated to the bus.
5. Whether or not DMA has been allocated for the 3455A.
6. Which functions (mode selection, range, high or low resolution, auto calibrate, etc.) are selected on the 3455A.

Application Note AN 201-4 gives an excellent description and breakdown of 3455A I/O characteristics during a performance evaluation. These details will not be reiterated here.

Typically, the 3455A is not considered to be a "fast" device compared to other devices on the HP-IB. When transferring data in the interrupt mode (when an interrupt is generated for each byte of information input), approximately 16 readings may be obtained per second (assuming all of the conditions above, except buffering, are optimal). The 3455A is actually capable of outputting 22 readings per second maximum rate. When these high performance characteristics are desired, a special I/O driver which sacrifices the generalities of HP-IB is available and can be used. The features and capabilities of this software are documented in Application Note AN 201-7 (part number 5953-3004).

Figure 7-9 shows a typical 3455A performance graph (time vs. number of readings taken) when the device is programmed as shown in Figure 7-10. Note that DMA was not allocated and buffering was turned off. The readings were formatted into binary using free field input in FORTRAN.

