E8364B-07

RVICE

Supersedes: NONE

E8364B PNA Series RF Network Analyzers

Serial Numbers: MY00000000 - MY43040911

Add-on mechanical components to enhance instrument reliability

To Be Performed By: Agilent-Qualified Personnel or Customer with specific product repair

knowledge - requires instrument disassembly and component

replacement.

Parts Required:

P/N **Description** Qty. Enhancement No.1 (Applies to all models and options) Ribbon Cable Clamp E8364-00021 Screw, M3.0x10mm, Pan Head 1 0515-0374

Enhancement No.2 (Applies to all models and options) Retainer Clip E8361-20067

0515-1644 Machine Screw, M3.0 x 12mm

Flat Head (For Retainer Clip)

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:		
MODIFICATION AVAILABLE		
ACTION CATEGORY::	AGREEABLE TIME	X PERFORMANCE ENHANCEMENT X SERVICE / RELIABILITY ENHANCEMENT
LOCATION CATEGORY:	X ON-SITE X SERVICE CENTER	AVAILABILITY: Support Life
AUTHOR: DYCS		PRODUCT LINE: WN

ADDITIONAL INFORMATION: This service note (written May 9, 2008) applies to all E8364B being manufactured before serial number MY43040912. The serial number is found at the back of the instrument. This Service Note must go along together with the instrument model Service Guide during modification.

© AGILENT TECHNOLOGIES, INC. 2008 PRINTED IN U.S.A.



May 9, 2008

Rev 14

Page 1 of 10

Page 2 of 10 E8364B-07

Enhancement No.3 (Applies to all models and options)

0515-2799 Patch-lock Screw, M3.0x 10mm

Pan Head (For Cable Hold

Wire) 2

3050-0891 Flat Washer (For Patch-lock

Screw) 2

Situation:

Further design review has suggested the addition of a clamping mechanism to ensure that the 8121-0118 ribbon cable can not vibrate loose from the Test Set Motherboard connector during extreme handling.

New clamps and locking screws are being added to ensure that those printed circuit assemblies can not vibrate loose from their connectors during extreme handling.

Solution/Action:


Enhancement No.1 (Applies to all Options)

1. Required Tool for Ribbon Cable Clamp

a. Gather a standard 10 lb-in breakaway wrench (used for semi-rigid cables).



b. Remove the open end head by loosening set screw. It will be replaced with L-Key shown below.

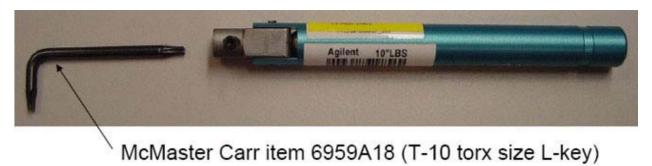

c. Secure and orient the L-Key to the breakaway handle




Page 3 of 10 E8364B-07

 Ribbon Cable Clamp Installation Instructions

 a. Remove and discard existing screw near ribbon cable connector on System Motherboard. See

 below.

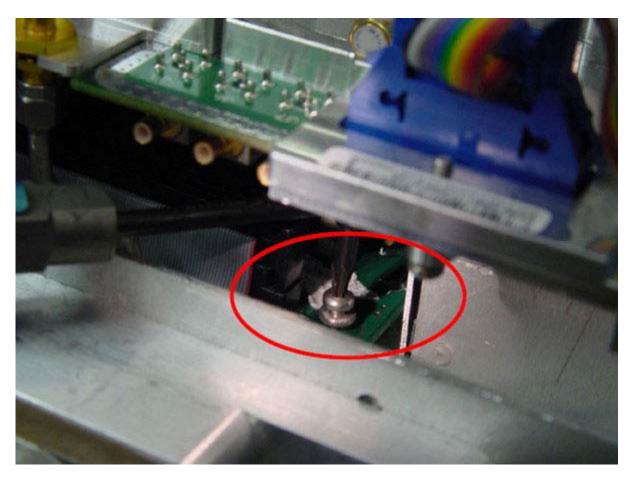

Page 4 of 10 E8364B-07

b. Insert Ribbon Cable Clamp under Source Assembly as shown.




c. Position the clamp over the Ribbon Connector. Use needle nose pliers if necessary to slide the clamp into place. Ensure that the edge of the clamp is parallel to the connector and not skewed.



Page 5 of 10 E8364B-07

NOTE: Ensure that the Clamp Lip is secured BELOW the edge of the System Motherboard

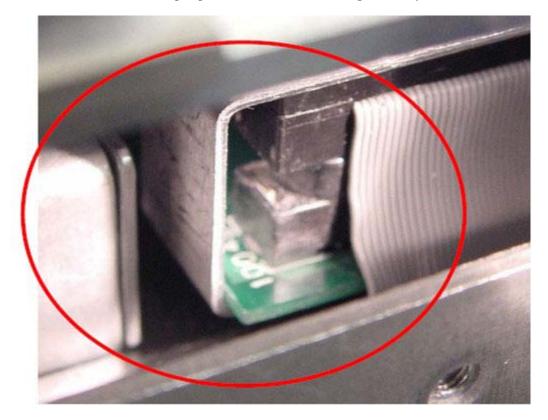


d. Using tweezers, install a new 0515-0374 screw through the hole in the bracket.



Page 6 of 10 E8364B-07


e. Use a nut runner tool (T-316130) or alternatively a clean erasure end of a pencil to help run the screw



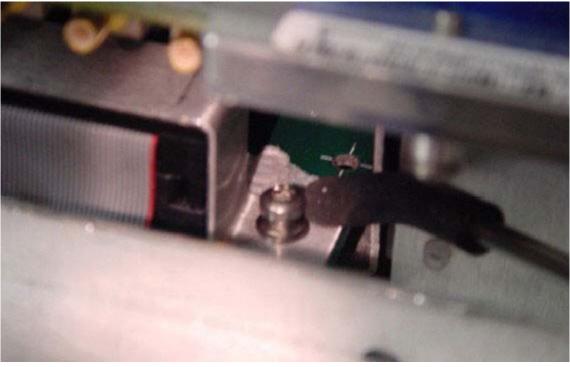


Page 7 of 10 E8364B-07

f. Secure screw using the modified 10 lb-in breakaway wrench.

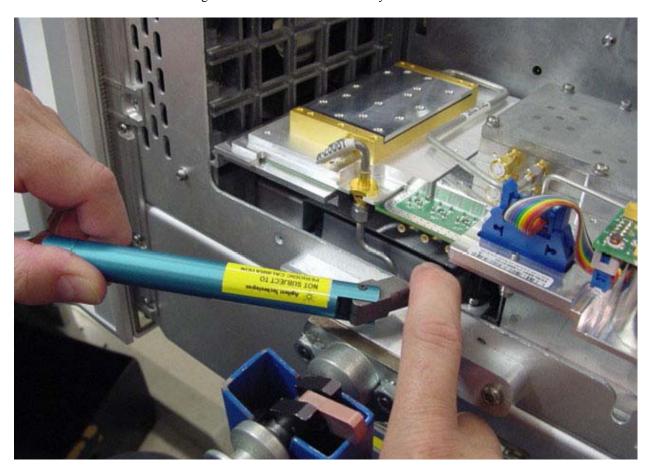

g. This image shows the final position of the secured clamp.

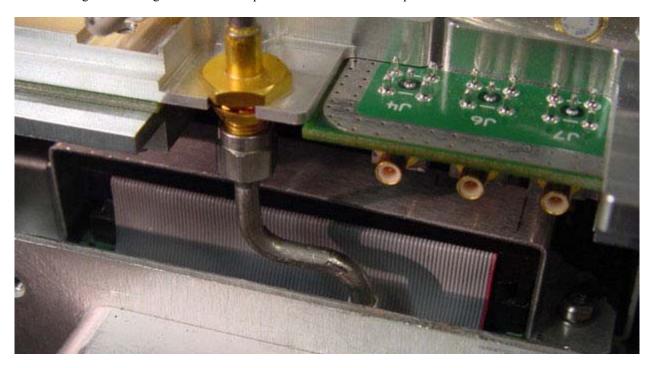


Page 8 of 10 E8364B-07


Enhancement Issue No.2 (Applies to all models and options)

The Clip Retainer (E8361-20067) to be secured with Flat Head screw (0515-1644) in 2 places at 9 lb-in. This Retainer Clip may naturally rotate a bit when being secured, which is acceptable. Note that the existing screw needs to be removed and discarded prior installing Retainer Clip #1 (shown below in Figure 2a, 2b, and 3).



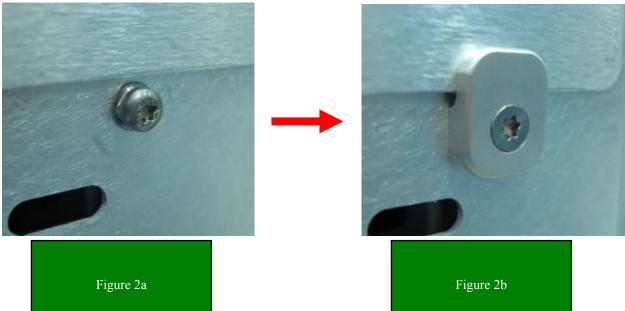

Page 9 of 10 E8364B-07

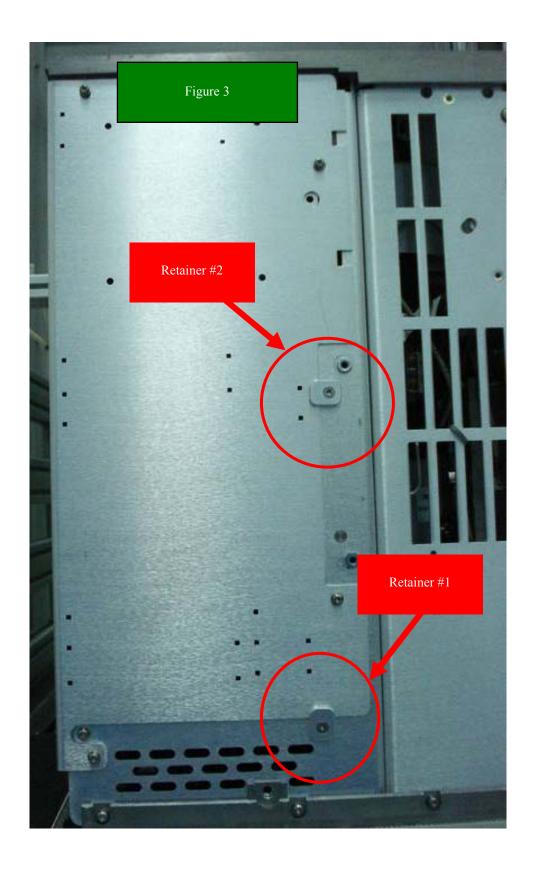

Page 10 of 10 E8364B-07

Enhancement No.3 (Applies to all models and options)

The Patch-Lock Screw (0515-2799) and Flat Washer (3050-0891) to be used in 2 places and secured at 9 lb-in. These parts will replace existing screw (0515-0374) used in Step 3 and Step 4 (as shown in Figure 2) to secure the Phase Lock Board (E8364-60137).



Figure 1:
Patch-Lock Screw (0515-2799)
And
Flat Washer (3050-0891)

